

STAINLESS STEEL PALLET SCALES



release date 05-01-2012



Pallet scales are stable 4 load cell constructions designed for weighing pallets. The load can be placed on the platform by a standard fork-lift truck. Pallet scales series WPT/4P xxx/H are manufactured in stainless steel technology.



Counting pieces





Checkweighing



Summing function

Pallet scales feature wheels and handles for easy operation and transport. The scale is equipped with a backlit LCD indicator PUE C/31 H installed on a three meter long cable

The capacities of scale series WPT/4P xxx/H range from 600 kg /200 g to 3000 kg /1000 g. Power supply 230V AC, RS 232 output as standard.

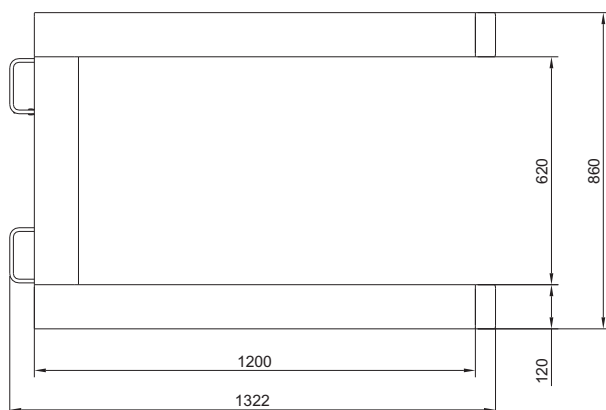

Technical data:

	WPT/4P 600H	WPT/4P 1500H	WPT/4P 3000H	WPT/4P 300/600H	WPT/4P 600/1500H	WPT/4P 1500/3000H
Max capacity	600 kg	1500 kg	3000 kg	300/600 kg	600/1500 kg	1500/3000 kg
Readability	200 g	500 g	1000 g	100/200 g	200/500 g	500/1000 g
Tare range	-600 kg	-1500 kg	-3000 kg	-600 kg	-1500 kg	-3000 kg
Pan size	860×1260 mm					
Working temperature	-10° - +40 °C					
Output signal	RS 232					
IP rating	IP 68 construction, IP 66/67 indicator					
Power supply	230V AC, 50Hz / 11V AC and battery					
Display	LCD (backlit)					
Scale net weight with indicator	~45 kg					
Transport dimensions	1330×860×80 mm					

Additional equipment:

"KAFKA" THERMAL PRINTER	POWER LOOP AP2-2 (STAINLESS STEEL VERSION)
IMPACT PRINTER "EPSON"	CONVERTERRS 232/RS 485 KR-01
ANTI-DUST CASE FOR EPSON PRINTER	STAND FOR STAINLESS STEEL INDICATOR
LCD DISPLAY IN STAINLESS STEEL HOUSING WD-4/3	COMPUTER SOFTWARE: PW-WIN, RAD-KEY, REC-FS, LS-FS
LARGE SIZE LCD DISPLAY WWG-2	CABLE RS 232 [SCALE - KAFKA PRINTER]: P0253
RACK FOR HEAD	CABLE RS 232 [SCALE - COMPUTER]: P0259
	CABLE RS 232 [SCALE - EPSON PRINTER]: P0261

RADWAG

26-600 Radom • 28 Bracka Street • POLAND • Phone: +48 48 3848800 • Fax: +48 48 3850010 • www.radwag.com • e-mail:export@radwag.com